ASSEMBLY INSTRUCTION

Excellent 2 door TVC

A-06 (4x75mm)	B-12 (4x19mm)	C-07	D-02	E-01	F-01
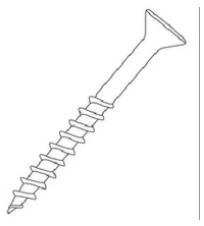			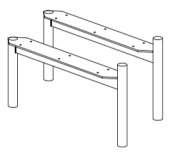	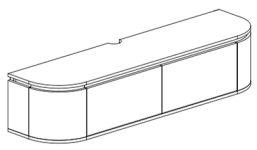	

STEP - 01

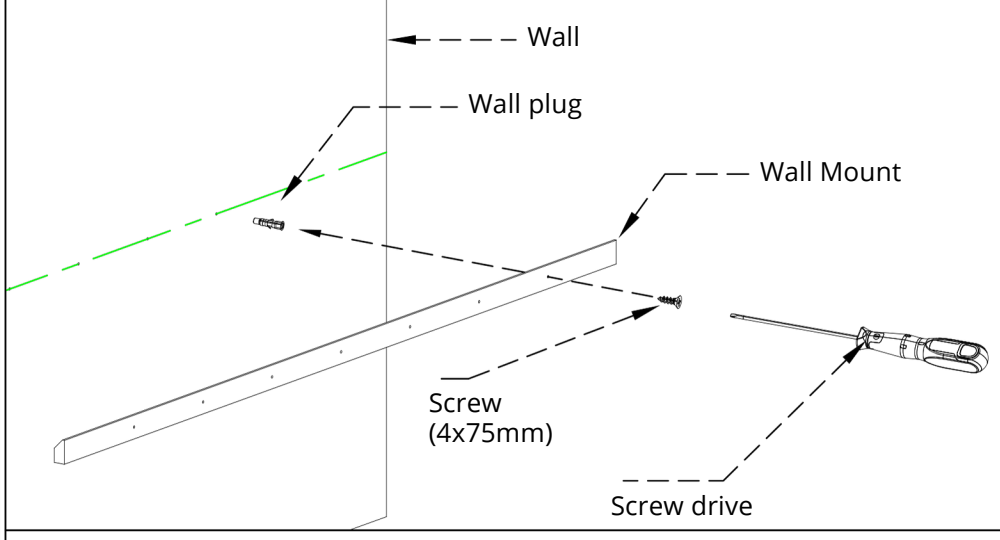

STEP - 02

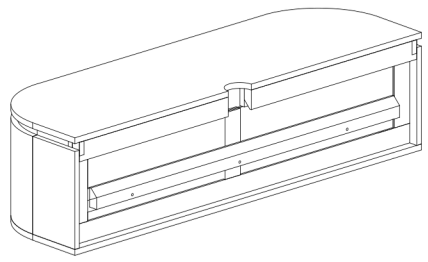

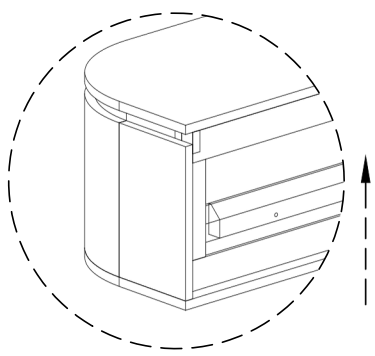

STEP - 03 (2nd Option)

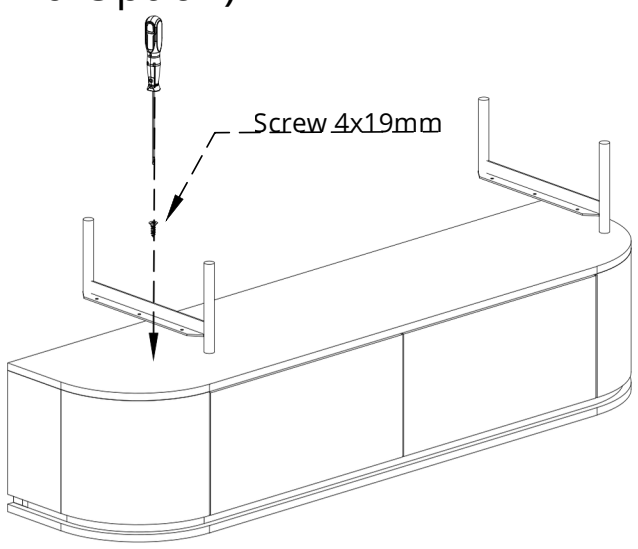

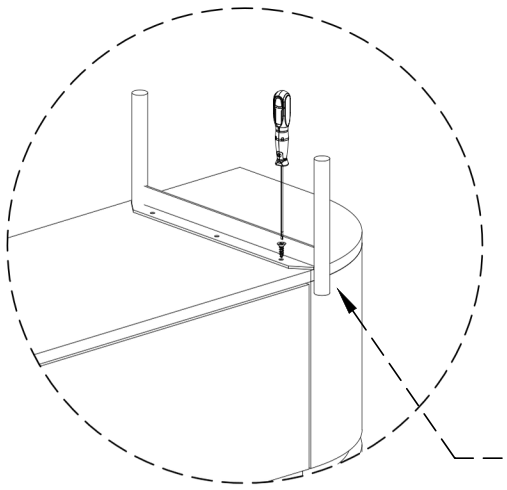

Please make sure there is a 3mm space between the leg and the door.

Final

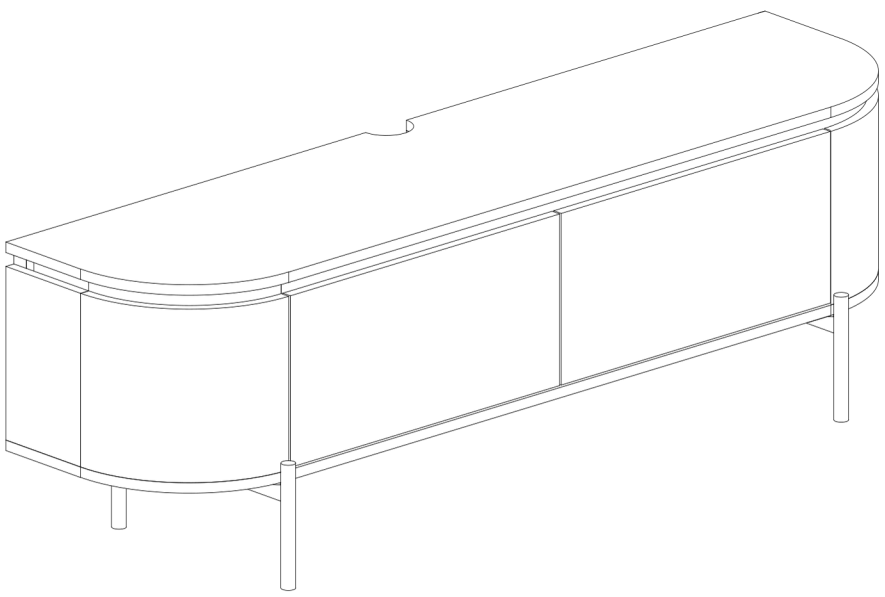

STAR FURN