

ASSEMBLY INSTRUCTION

Excellent 4 door TVC

A-07 (4x75mm)



B-12 (4x19mm)




C-07




D-01




E-02

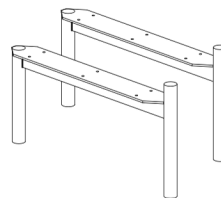


F-01

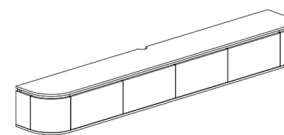



STEP - 01

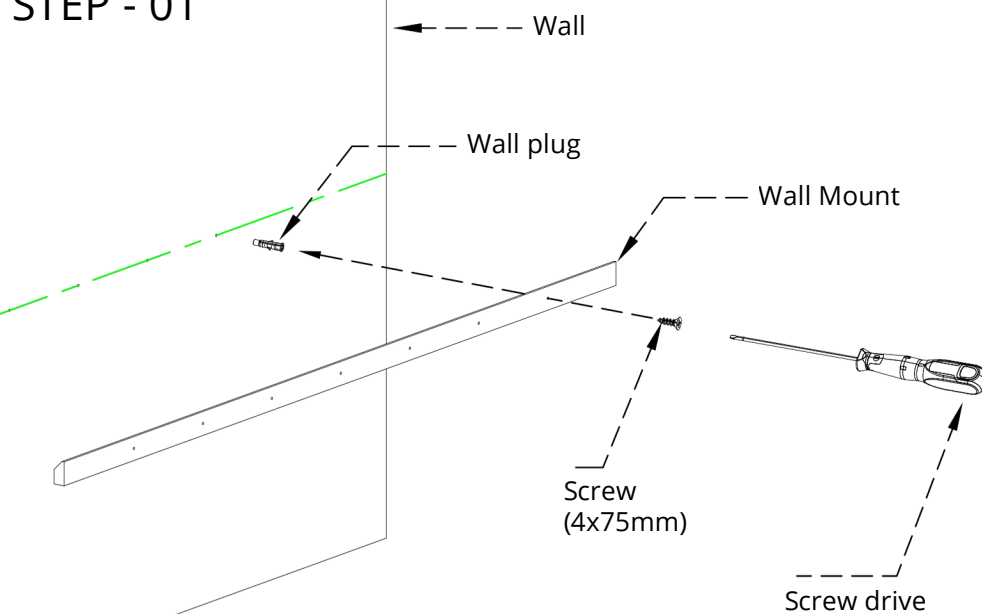

STEP - 02

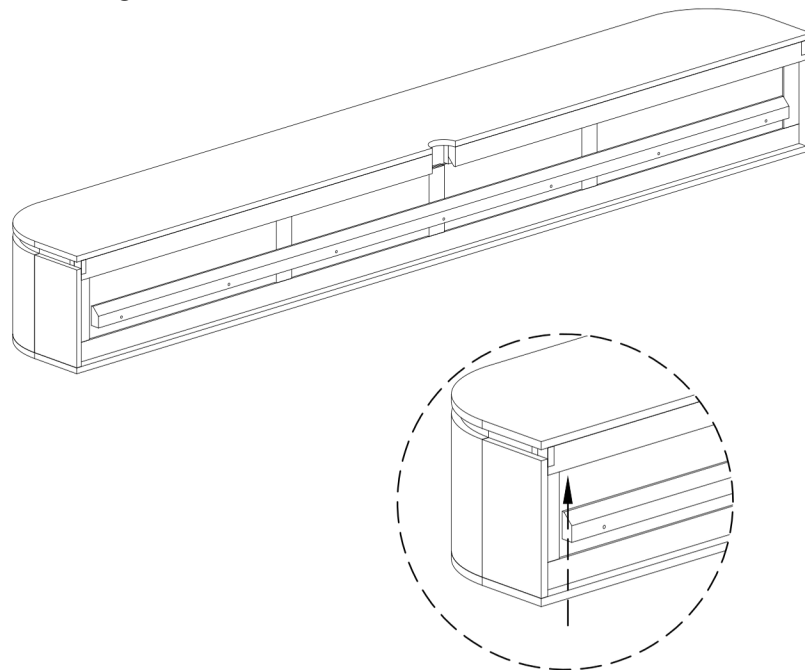


STEP - 03

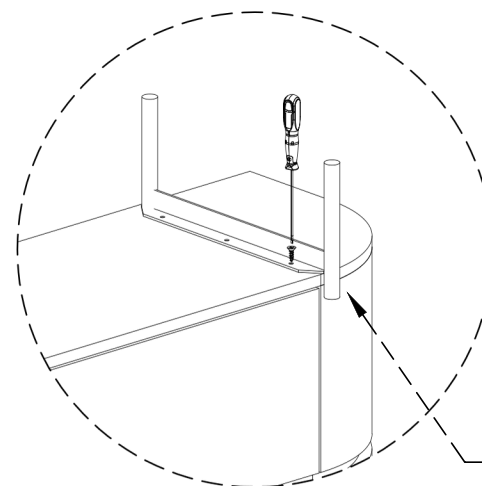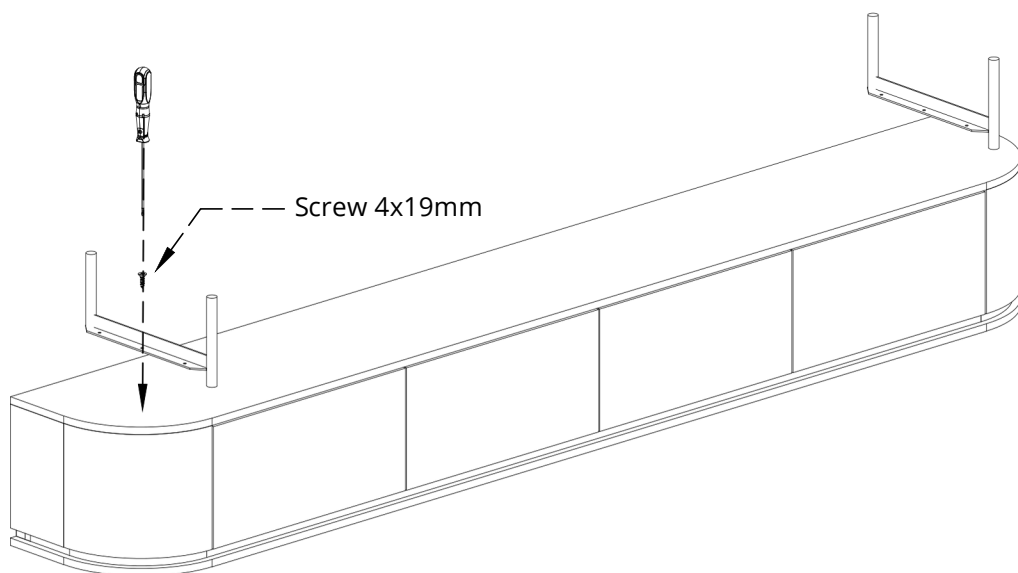

Please make sure there is a 3mm space between the leg and the door.

Final

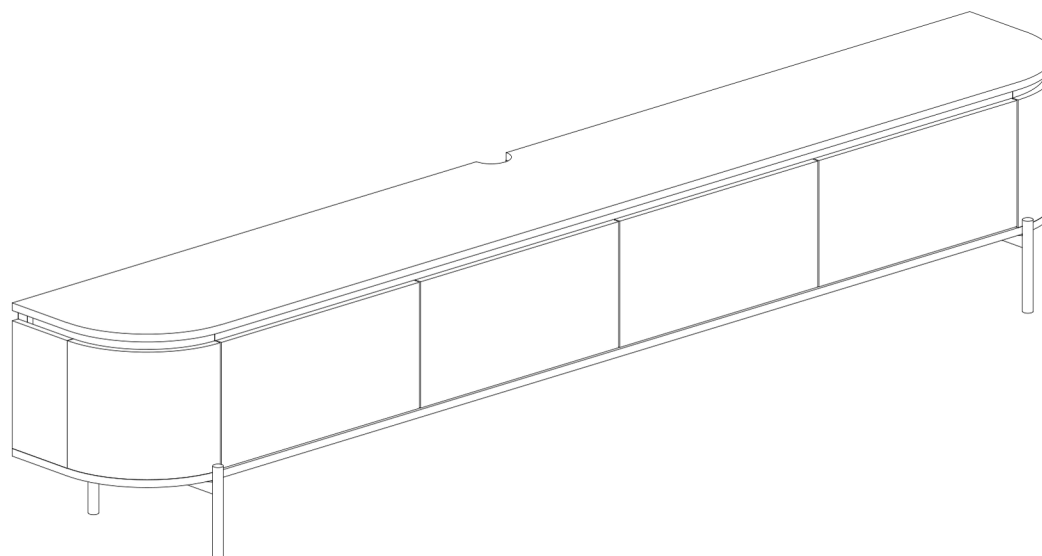

STAR FURN