

ASSEMBLY INSTRUCTION

A-06 (M8x50mm)



B-06 (M8)



C-12 (M8x20mm)




D-01 (13mm)




E-16 (4x19mm)




STEP - 01

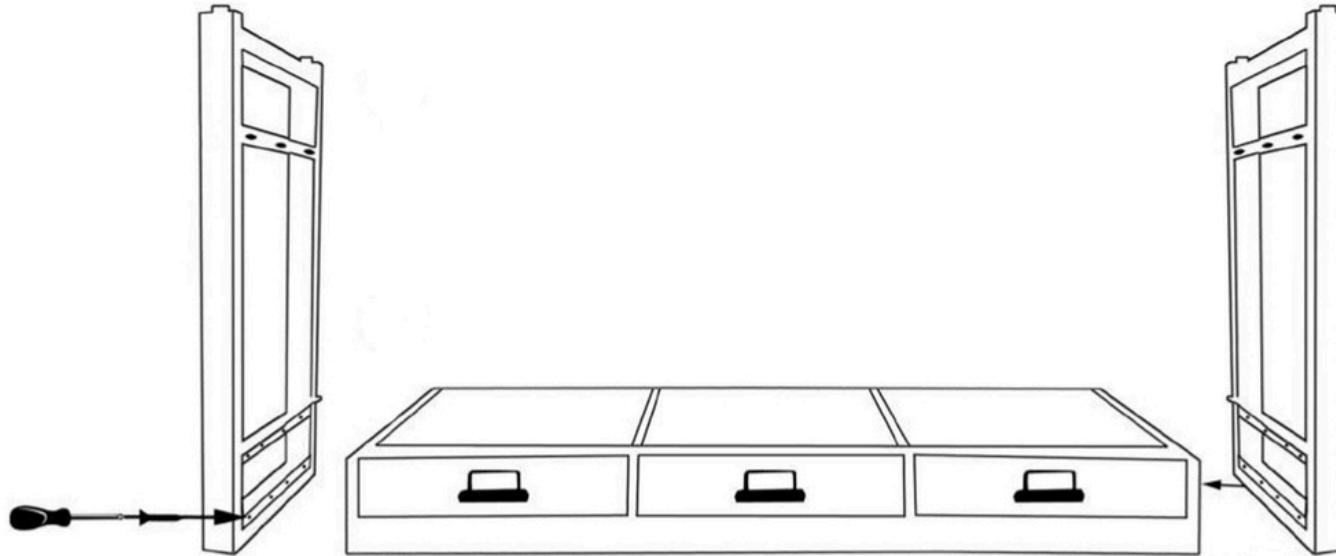

STEP - 02

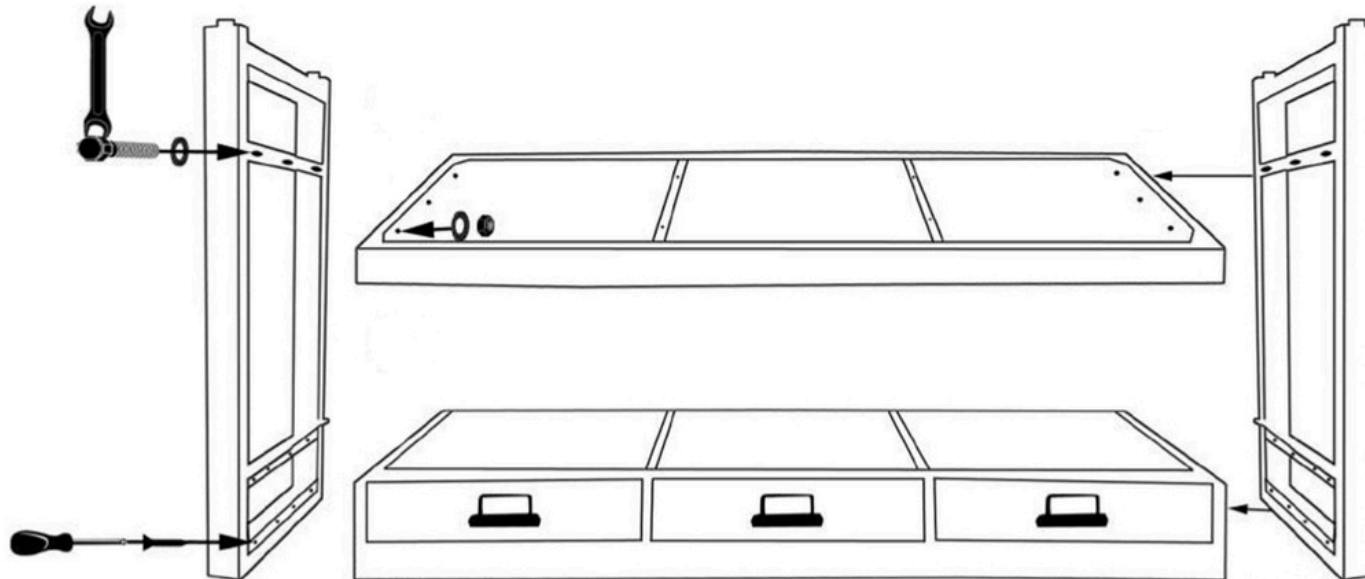

Final

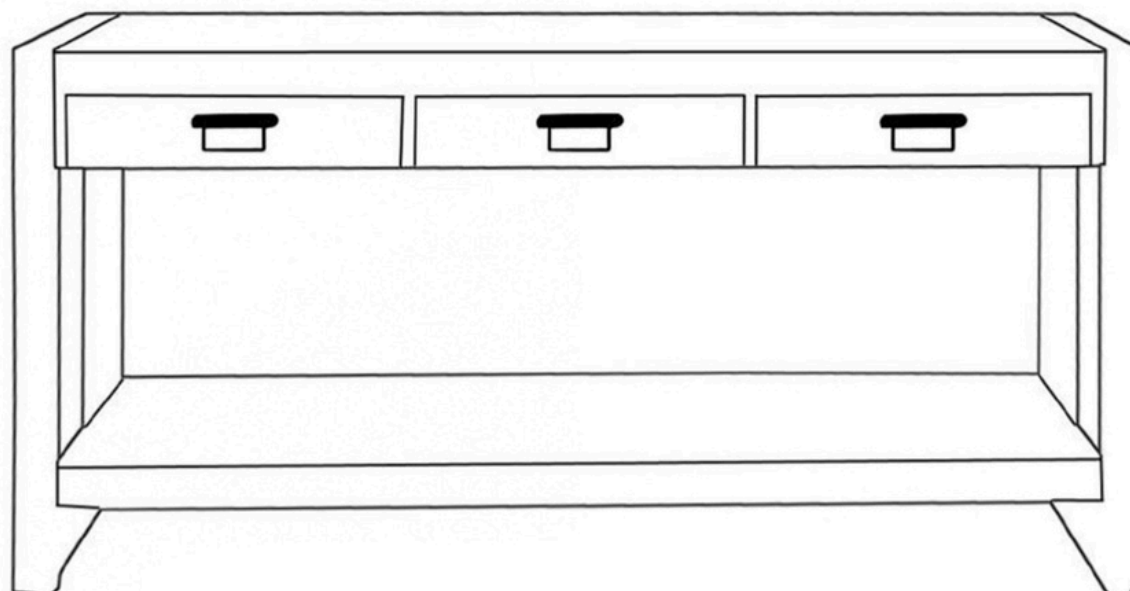

STAR FURN